


Artistic Coverings, Inc  
 Measuring for Factory Cut - Outs

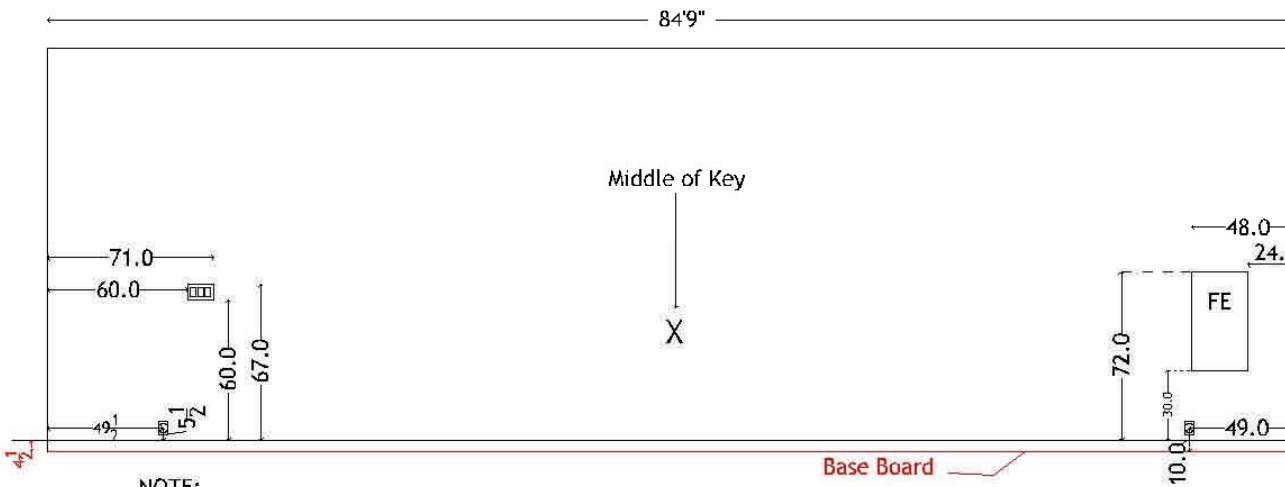

- =Elect Outlet - Measure to center
- =Multi - Outlet - Measures to Edges and Hts
- FE = Fire Ext - Measures to Edges and Hts
- W = Windows - Measures to Edges and Hts
- D = Doors - Measures Width and location of door handles or bar
- WF = Water Fountain - Measures to Edges and Hts

NOTE:

See specs on FR molded rubber outlet inserts for on site cut-outs

DWG NOT TO SCALE