


Gym Wall Pads

Instructions for in the field cut outs

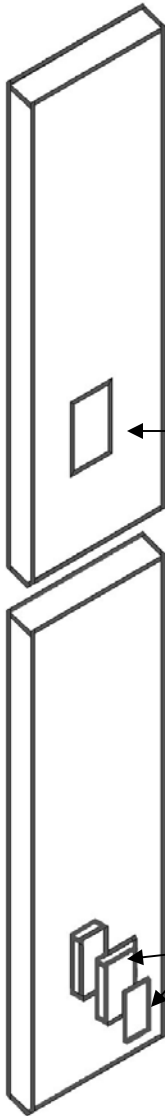

Artistic Coverings, Inc.
16444 Manning Way
Cerritos, Ca 90703
Ph: 877-599-9343
Fax: 562-404-9343
www.artisticcoverings.com
info@accov.com



1. Locate cutout on back of pad. Recommended 4" x 6" wall outlet

2. Using a jigsaw, cut away the backer board. Remove backer.

3. Using an electric carving knife, cut foam utilizing the cutaway backer as a jig. Remove foam.

4. Place extra vinyl in the corners of the cutout. Glue to foam face and staple to backer.

5. Cut vinyl covering from corner to corner.

6. Pull tabs to backer and staple.

