


Wall Pad Cutout Trim Kit

Specifications—Wall Pad Cutout Trim Kit

Wall Pad Cut-Out Trim Kit provides for a neat and clean answer to accessing receptacles and wall switches on surfaces that are to be padded. Wall Pad Cut-Out Trim Kit is constructed of flexible a flame resistant molded urethane material. Inserts are easily installed in field cut-outs and secured with adhesive and staples.

7" x 7" Wall Pad Cut-Out Kits fit Single Gang or Dual Gang Openings as well as standard fire alarm pull stations. Wall Pad Cut-Out Trim Kit available in light grey (P/N 108504700) or black (P/N 108504701).

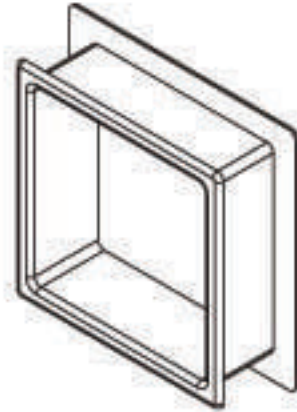

Please Mark Appropriate Selections

Select Wall Pad Cutout Trim Kit:

- Grey How many? _____
 Black How many? _____

Installation Instructions

- ① Locate cut-out on back side of pad and carefully mark 7" x 7" square so the receptacle, switch, etc. are located at the center.
- ② Using a jig-saw cut and remove backer board.
- ③ Using a electric carving knife or sharp utility knife, carefully cut and remove the foam using the opening in the backer board as a guide. Use caution to not cut vinyl.
- ④ X-cut vinyl from corner and pull points to backer and staple.
- ⑤ Insert Wall Pad Cut-out Trim Kit into opening with the smaller beveled edge facing the front. Apply adhesive to the inside of the Wall Pad Cut-Out Kit Channel to adhere it to vinyl and foam and staple rear flange to backer board.



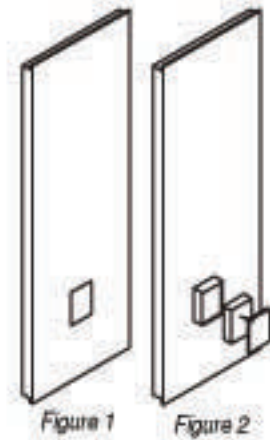


Figure 1

Figure 2

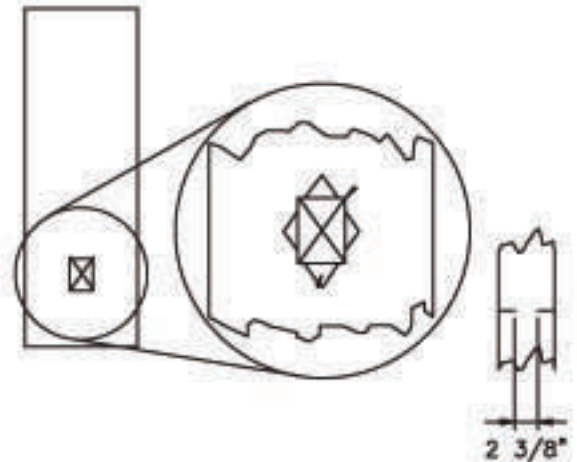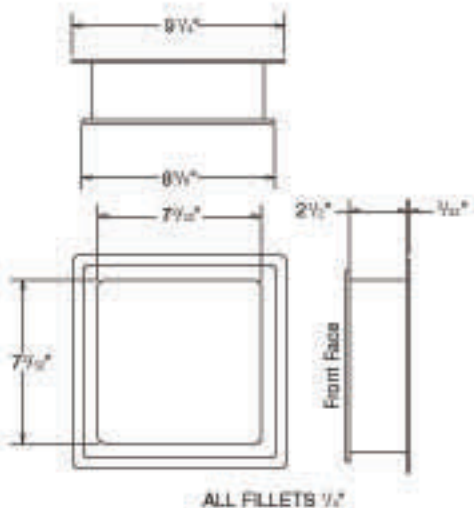

Artistic Coverings Inc
 16444 Manning Way
 Cerritos, Ca 90703
 Toll Free: 877.599.9343
 Local: 562.404.9343
 Fax: 562.404.9335